Gallagher Command Centre

Move Cardholders Utility 8.50

C12712

Release Note

Copyright © Gallagher Group Limited

Disclaimer

This document gives certain information about products and/or services provided by Gallagher Group Limited or its related companies (referred to as "Gallagher Group").

The information is indicative only and is subject to change without notice meaning it may be out of date at any given time. Although every commercially reasonable effort has been taken to ensure the quality and accuracy of the information, Gallagher Group makes no representation as to its accuracy or completeness and it should not be relied on as such. To the extent permitted by law, all express or implied, or other representations or warranties in relation to the information are expressly excluded.

Neither Gallagher Group nor any of its directors, employees or other representatives shall be responsible for any loss that you may incur, either directly or indirectly, arising from any use or decisions based on the information provided.

Except where stated otherwise, the information is subject to copyright owned by Gallagher Group and you may not sell it without permission. Gallagher Group is the owner of all trademarks reproduced in this information. All trademarks which are not the property of Gallagher Group, are acknowledged.

Copyright © Gallagher Group Ltd 2024. All rights reserved.

Copyright Notice

The software contains proprietary information of Gallagher Group Limited; it is provided under a license agreement containing restrictions on use and disclosure and is also protected by copyright law. Reverse engineering of the software is prohibited.

Due to continued product development this information may change without notice. The information and intellectual property contained herein is confidential between Gallagher Group Limited and the client and remains the exclusive property of Gallagher Group Limited. If you find any problems in the documentation, please report them to us in writing. Gallagher Group Limited does not warrant that this document is error-free.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written permission of Gallagher Group Limited.

Contents

1 Introduction 5
2 Installation 6
3 Running the 'Move Cardholders Utility' 7
4 Upgrading 11
5 Uninstallation 11
6 Known issue 11
Appendix A: Configuring certificate permissions 12

Copyright © Gallagher Group Limited

Copyright © Gallagher Group Limited

1 Introduction

This release note is for the 'Move Cardholders Utility' of Gallagher Command Centre.

1.1 Purpose

The 'Move Cardholders Utility' moves all Cardholders from one Access Zone to another Access Zone. An operator can specify the destination using an Access Zone or a reader (any reader type).

When specifying a reader as the destination, access events are automatically logged within the Command Centre database. As such, the access events can be used for time and attendance reporting or any other feature/third-party application that retrieves access events from the database. This functionality does not support Zone Counting, Anti-tailgating, Personalised Actions, Action Plans or any other Controller-side functionality.

When specifying an Access Zone as the destination, 'operator moved Cardholder' events are logged in the event trail and can be reported using a Command Centre Activity Report.

1.2 Compatibility

This feature introduces the Gallagher Move Cardholders Utility v8.50.04

This feature supports the following Gallagher software:

- Gallagher Command Centre vEL8.50.2048 (or later vEL8.50 release)
- Gallagher Controller 6000 vCR8.50.211007a (or later vCR8.50 release)

Command Centre and this feature have been tested using the following:

- Command Centre Server: Windows Server 2016 (64-bit)
- Database: SQL Server 2017 Express

This utility must be run on the Command Centre server. It cannot be run from a Command Centre workstation.

This utility is **not** supported in a Command Centre multi-server environment.

Copyright © Gallagher Group Limited

2 Installation

Note: If an earlier version of this utility is installed, upgrade the utility to the new version. Refer to the topic *"Upgrading"* later in this release note.

To install this utility, perform the following procedure on the Command Centre server:

1. Perform a backup of your Command Centre system.
2. Ensure your licence file contains the following entry:

   ```
   [Customisations]
   MoveCardholders=1
   ```

3. Store the licence file in the following folder:
   `C:\ProgramData\Gallagher\Command Centre`
4. Exit Command Centre and stop the Command Centre Services.
5. On the Command Centre server and all Command Centre workstations, install Command Centre vEL8.50.2048 (or later vEL8.50 release) from the installation media, if not already installed.
6. Unzip the folder you have been provided and run the installation executable **MoveCardholdersSetup_8.50.xx.msi** on the Command Centre server.

   If installed on a 32-bit system, the utility installs in the following location:
   `C:\Program Files\Gallagher\Command Centre\Bin`

   If installed on a 64-bit system, the utility installs in the following location:
   `C:\Program Files (x86)\Gallagher\Command Centre\Bin`
7. Restart the Command Centre Services and Command Centre.
8. To ensure the 'Move Cardholders Utility' has installed correctly, check the following:
   - Select **Help** > **About Command Centre** from the Command Centre Configuration Client main menu on the Command Centre server. The entry 'MoveCardholders v8.50.0xx' should be displayed in the Customisations field.
   - Select the **Programs and Features** utility from the Windows Control Panel on the Command Centre server. The program 'Move Cardholders Utility' should be listed as currently installed.

Copyright © Gallagher Group Limited

3 Running the 'Move Cardholders Utility'

To run the 'Move Cardholders Utility', perform the following procedures in Configuration Client on the Command Centre Server:

3.1 Creating a 'Move Cardholders' operator
3.2 Creating a Macro

3.1 Creating a 'Move Cardholders' operator

An operator is required for the 'Move Cardholders Utility'. The operator username and password are used to log 'operator moved Cardholder' events.

Create a 'Move Cardholders' operator. Add the 'Manage Cardholder Location' and 'View Cardholders' operator privileges to the operator's group. If you are using a reader as a target, the 'View Site' operator privilege also needs to be added.

Notes:

- The operator's username and password are exposed by the utility, hence you must assign **no** other privileges to the operator.
- The operator (hence the utility) is only able to move the Cardholders for which the operator has the privilege to view.
- The operator logon used by the utility does **not** consume any workstations licenses.

3.2 Creating a Macro

A command line can be added to a Command Centre Macro to run the utility. Multiple command line entries can be added to a single Macro, and other items and actions that Macros currently perform can also be added to the same Macro if required.

Once configured, the Macro can be assigned to an Action Plan, which is triggered by an Input or card event at a Door.


This procedure describes how to run the 'Move Cardholders Utility' by adding a command line to a Macro.

Notes:

- To run the Macro, the Command Centre Services must be running.
- You need a valid login name and password for the Command Centre server to run a command line.

1. Click **Configure** from the menu bar, then **Macros**.
   The Macro Master List Window opens (in grid view).
2. Right-click and select **New...Macro**.
   By default the General tab displays.
3. Complete the fields as required.
4. Click the **Command Lines** tab.

Copyright © Gallagher Group Limited

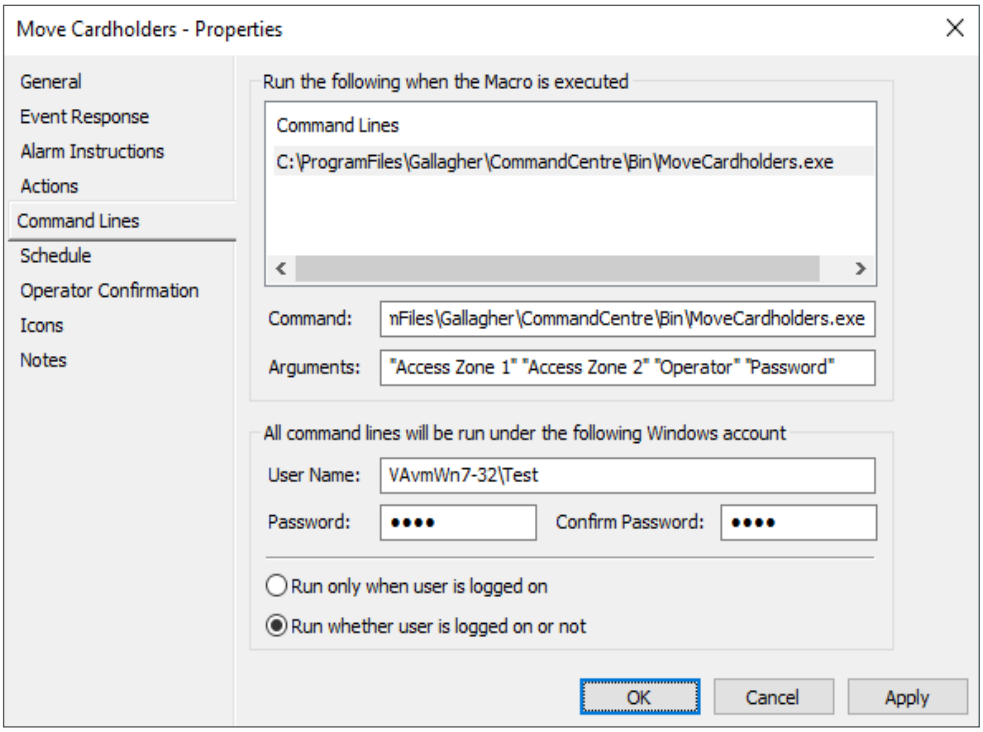

5. Right-click anywhere within the Command Line grid and select **Insert**.

   The lower fields of this screen are enabled and cleared of any previous content, and a new entry is added to the Command Line list.

   Note: There is no limit to the number of command lines that can be added to the Command Line grid.

6. Complete the fields as appropriate:

Field	Description
Command	Specify the MoveCardholders.exe executable to initiate when the Macro is run. For example: *C:\Program Files\Gallagher\Command Centre\Bin\MoveCardholders.exe* OR *C:\Program Files (x86)\Gallagher\Command Centre\Bin\MoveCardholders.exe* The command line can, optionally, include up to 300 characters free text entry, used to specify the parameters associated with the file to be run from the command line. The free text entry can include ASCII characters, (e.g. #, % and /). These parameters, if configured, are passed to the command line, in addition to the file that is called when the Macro is run. (Maximum length = 260 characters)

Copyright © Gallagher Group Limited

Arguments	Specify: - The Access Zone where Cardholders will be moved from. - The Access Zone or Reader where Cardholders will be moved to. - The operator username. - The operator password. **Notes:** - The Reader name specified must be unique (i.e. there must not be both a Cardax IV Reader and HBUS Terminal with the same name). - The Reader must be attached to either the entry or exit side of the Door but not both. - If the Reader is attached to the entry side, then the Cardholders are placed in the entry Access Zone of the Door. If the Reader is attached to the exit side, then the Cardholders are placed in the exit Access Zone of the Door. - If specifying a Reader (not an Access Zone) as the moved-to argument, you must complete step 3 "Configuring Certificate Permissions" earlier in this release note. These arguments will be passed to the MoveCardholders.exe (Maximum length = 300 characters) **Notes:** - A "space" is required between the quotation marks e.g. "Access Zone 1" "Access Zone 2" not "Access Zone 1""Access Zone 2" - The argument "<no zone>" can be used to move Cardholders outside the system, (i.e. the Cardholders will no longer reside in any Command Centre Access Zones). - If you don't want to see log in and log out events for the operator, then add -L to the command string. For example: "Access Zone 1" "Access Zone 2" "Operator" "Password" -L
User Name	To configure a command line with a domain account, you must prefix the 'User Name' with the domain name plus a slash character (e.g. Gallagher 1\FTUser). (Maximum length = 290 characters)
Password and Confirm Password	The password for the Windows User Account must be typed in both the 'Password' and the 'Confirm Password' fields. The password is not made visible during configuration or when the Macro properties are viewed. (Maximum length = 260 characters)

Copyright © Gallagher Group Limited

Note: A valid Windows Logon name/password on the Server PC must have one of the following privileges under 'Local Security Settings':

- Log on locally.
  This allows interactive access, and any program run from a Macro (from another workstation) will show running actively on the server monitor.
- Log on as a batch.
  This allows the program to execute in the background on the server (need to view through Task Manager).

OR

- NOT be "denied access from the network" as this stops an executable running if the user doesn't also have the "log on locally" privilege.

7. Click the appropriate radio button for how you want the command lines to be executed.

Option	Description
Run only when the user is logged on	This option will only run the command lines if you are actively logged into Windows when the Macro executes. If a command line has a GUI component, it will be visible.
Run whether user is logged on or not	This option runs the command lines regardless of whether you are logged into Windows, but all commands will be run in the background (i.e. no GUI component in a command will be visible).

8. Click **OK** to exit and save your changes.

Copyright © Gallagher Group Limited

4 Upgrading

To upgrade the 'Move Cardholders Utility', perform the following procedure:

1. Perform a backup of your Command Centre system.
2. Exit Command Centre and stop the Command Centre Services.
3. Using the Windows **Programs and Features** utility, remove the program 'Move Cardholders Utility' from the Command Centre server.
4. On the Command Centre server and all Command Centre workstations install Command Centre vEL8.50.2048 (or later release) from the installation media, if not already installed.
5. Unzip the folder you have been provided and run the installation executable **MoveCardholdersSetup_8.50.xx.msi** on the Command Centre server.

   If installed on a 32-bit system, the utility installs in the following location:
   `C:\Program Files\Gallagher\Command Centre\Bin`

   If installed on a 64-bit system, the utility installs in the following location:
   `C:\Program Files (x86)\Gallagher\Command Centre\Bin`
6. Restart the Command Centre Services and Command Centre.
7. To ensure the 'Move Cardholders Utility' has installed correctly, check the following:
   - Select **Help** > **About Command Centre** from the Command Centre Configuration Client main menu on the Command Centre server. The entry 'MoveCardholders v8.50.0xx' should be displayed in the Customisations field.
   - Select the **Programs and Features** utility from the Windows/Control Panel on the Command Centre server. The program 'Move Cardholders Utility' should be present.

5 Uninstallation

To permanently uninstall the 'Move Cardholders Utility', perform the following procedure:

1. Perform a backup of your Command Centre system.
2. Delete any Command Centre items configured for this utility (e.g. Macros).
3. Exit Command Centre and stop the Command Centre Services.
4. Using the Windows **Programs and Features** utility, remove the program 'Move Cardholders Utility' from the Command Centre server.
5. Restart the Command Centre Services and Command Centre.

6 Known issue

If a Cardholder enters an Access Zone via – for example – Door 1, and is then moved by the utility to another Access Zone (moved using an Access Zone argument, not a Reader argument), the Cardholder's **Status and Overrides** tab shows the Cardholder as having entered the new Access Zone via Door 1 (the last one they accessed). They may not have actually entered the new Access Zone via this Door.

Copyright © Gallagher Group Limited

Appendix A: Configuring certificate permissions

To be able to move Cardholders between Access Zones while using a Reader name in the Arguments field of a move cardholder Macro, you must make changes to the Command Centre Server certificate permissions. This is to allow the utility to generate card events as though they are coming from a controller.

To configure the Command Centre Server certificate permissions, perform the following procedure on the Command Centre server:

1. Hold down the **Windows key** and press **R** on your keyboard.
   The Run window displays.
2. Enter 'mmc' into the text field, then press Enter.
   If asked to allow the app to make changes to your device, click **Yes**.
   The Microsoft Management Console window displays.
3. From the menu bar, go to **File** > **Add/Remove Snap-in...**
   The Add or Remove Snap-ins window displays.
4. From the Available snap-ins grid, select **Certificates**, then click **Add >**.
   The Certificates snap-in window displays.
5. Select **Computer account**, then click **Next >**.
6. Select **Local computer**, then click **Finish**.
   Certificates (Local Computer) is added to the Selected snap-ins grid.
7. Click **OK**.
8. In the Microsoft Management Console, navigate to:
   Console Root > **Certificates (Local Computer)** > **Gallagher Applications** > **Certificates**
9. Move the **Gallagher Command Centre Server** certificate into the Personal folder (**Console Root** > **Certificates (Local Computer)** > **Personal**).
10. Right-click on the **Gallagher Command Centre Server** certificate and select **All Tasks** > **Manage Private Keys...**
    The Permissions for Gallagher Command Centre Server private key window displays.
11. Select the Windows user that will be running the Move Cardholders utility, and click **Add...**
12. Click **OK**.
13. Move the **Gallagher Command Centre Server** certificate back to:
    Console Root > **Certificates (Local Computer)** > **Gallagher Applications** > **Certificates**
14. Close the Microsoft Management Console window.
    When asked to save settings, click **No** (saving the console settings is not necessary for this procedure).

Note: The Windows account that you give access to the certificate (in step 11) can emulate part of the Command Centre system. Gallagher recommends that this account is well secured and its use is strictly limited.

Copyright © Gallagher Group Limited